



# JetCam Firmware Update Guide



January 2019

International Distributors

**sky blue**  
microsystems

Sky Blue Microsystems GmbH  
Geisenhausenerstr. 18  
81379 Munich, Germany  
+49 89 780 2970, [info@skyblue.de](mailto:info@skyblue.de)  
[www.skyblue.de](http://www.skyblue.de)

**ZERIF**  
TECHNOLOGIES LTD.  
A SKY BLUE COMPANY, FOUNDED 1999


In Great Britain:  
[Zerif Technologies Ltd.](http://ZerifTechnologiesLtd.com)  
Winnington House, 2 Woodberry Grove  
Finchley, London N12 0DR  
+44 115 855 7883, [info@zerif.co.uk](mailto:info@zerif.co.uk)  
[www.zerif.co.uk](http://www.zerif.co.uk)

The JetCam Cameras supports firmware update via USB using a serial emulated terminal. To initiate a firmware update follow the next steps:

1. Download the latest firmware from [KAYAs FTP server](#).  
Please make sure to download the correct FW for the camera that you have, as installing an incorrect FW may cause the camera to malfunction.
2. Connect a USB cable between the computer and the camera and acquire connection using Silabs drivers (drivers need to be downloaded manually if an automatic download isn't initiated).
3. Open serial emulated terminal (usage of Tera Term terminal is recommended) and set serial communication protocol as described in the table below:

Parameter	Value
Baud rate	115200
Start bits	1
Stop bits	1
Parity	None
Flow Control	None

For example in the Tera Term terminal, this should look as following (the port number might be different):

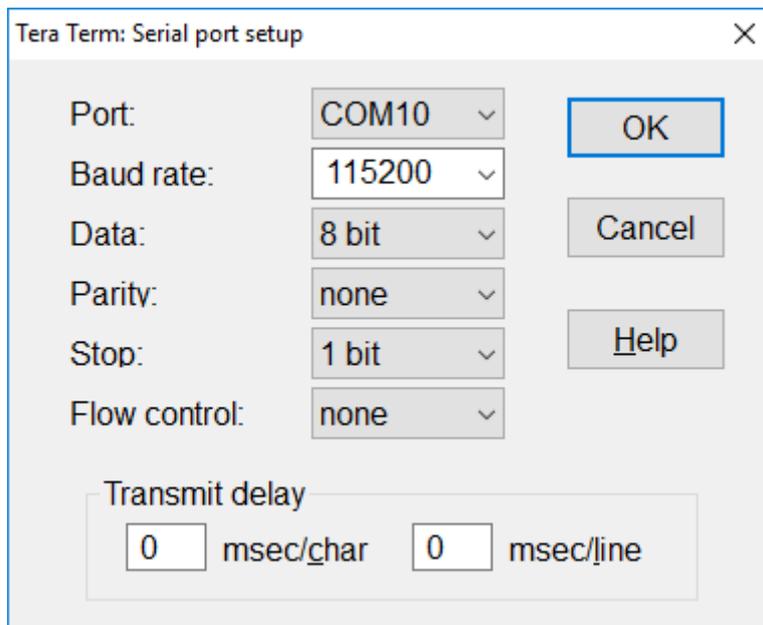


4. Choose the firmware update option by entering “firmware” followed by a carriage return and wait for the following message: "Now starting firmware update, please start file transfer using XMODEM:"

```
STATUS          -- Print status
FIRMWARE        -- Firmware update

JETCAM:> firmware
Now starting firmware update, please start file transfer using XMODEM:█
```


5. Under the “File” tab use the terminal “transfer” capability using the XMODEM protocol to initiate the firmware update. Choose “Send” and the firmware update file: *JetCam\_XXX\_YYY\_ZZZ.bin* (where XXX is the model name and YYY\_ZZZ is the version number)

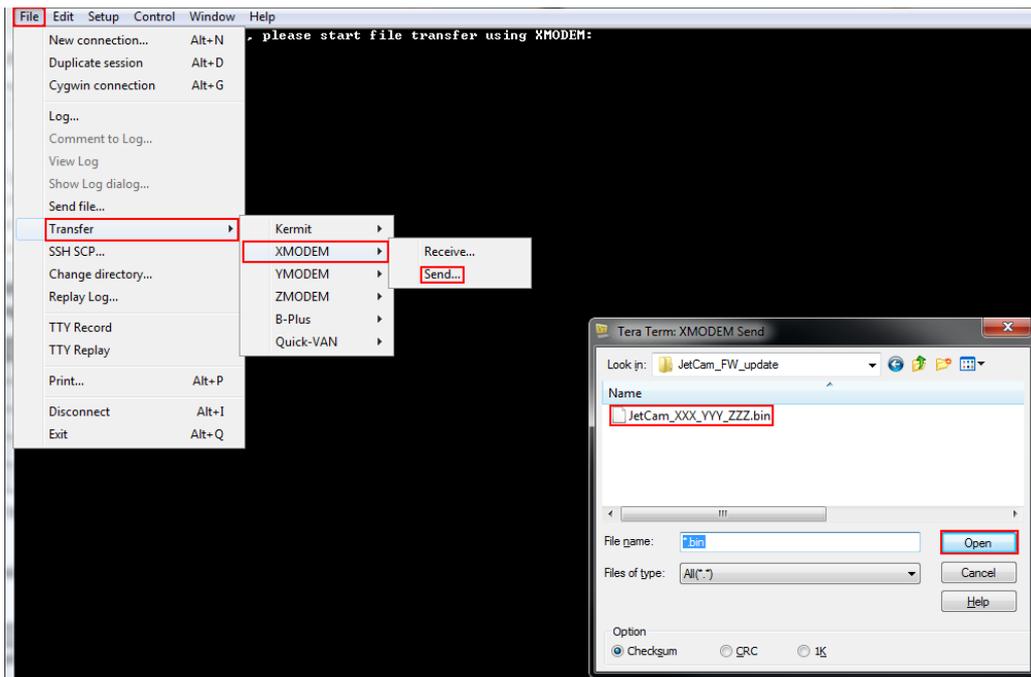

6. If no firmware will be sent during 1 minute, or in case of an error, the firmware update will fail and return to the previous operation mode:

```
JETCAM:> firmware
Now starting firmware update, please start file transfer using XMODEM:
update has failed
```

- The firmware update process will take about 10 minutes.

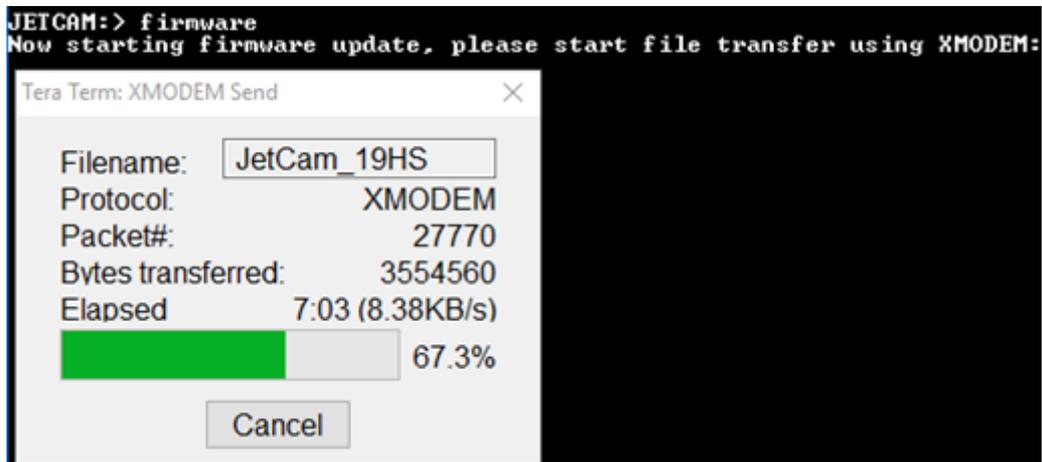

- A successful update will result in an appropriate message:

```
Firmware update was successful
JETCAM:>
```

- To apply the new firmware, the camera should be power cycled by disconnecting the power supply from the camera and connecting it back after a few seconds.

International Distributors

**sky blue**  
microsystems

Sky Blue Microsystems GmbH  
Geisenhausenerstr. 18  
81379 Munich, Germany  
+49 89 780 2970, info@skyblue.de  
www.skyblue.de

**ZERIF**  
TECHNOLOGIES LTD.  
A SKY BLUE COMPANY, FOUNDED 1999

In Great Britain:  
Zerif Technologies Ltd.  
Winnington House, 2 Woodberry Grove  
Finchley, London N12 0DR  
+44 115 855 7883, info@zerif.co.uk  
www.zerif.co.uk